

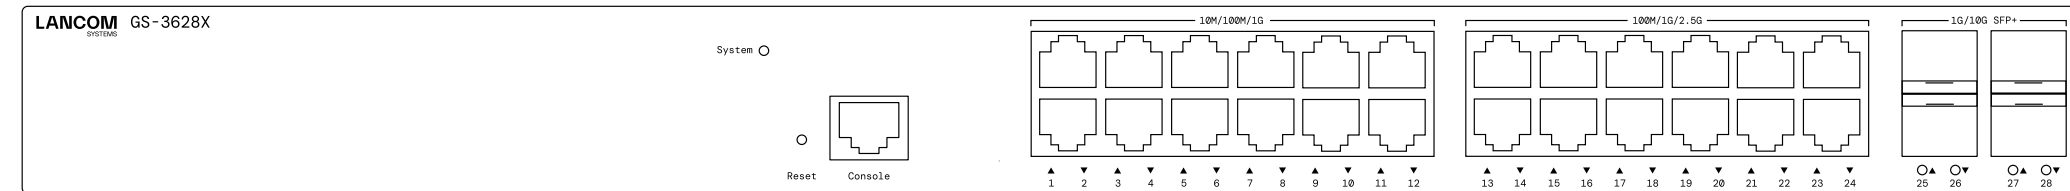



# Hardware Quick Reference LANCOM GS-3628X

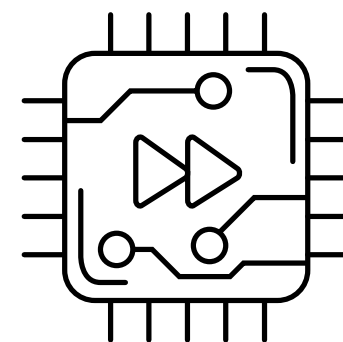

- ① **Configuration interface (Console)**  
Connect the configuration interface via the included serial configuration cable to the serial interface of the device you want to use for configuring / monitoring the switch.
- ② **TP Ethernet interfaces 10M / 100M / 1G**  
Use Ethernet cables to connect the interfaces 1 to 12 to your PC or a LAN switch.
- ③ **TP Ethernet interfaces 100M / 1G / 2.5G**  
Use Ethernet cables to connect the interfaces 13 to 24 to your PC or a LAN switch.

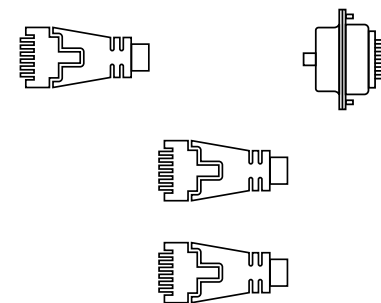

- ④ **SFP+ interfaces 1G / 10G**  
Insert suitable LANCOM SFP modules into the SFP+ interfaces 25 to 28. Choose cables which are compatible with the SFP modules and connect them as described in the module's documentation.
- ⑤ **Power connector (device back side)**  
Supply power to the device via the power connector. Please use the IEC power cable supplied or a country-specific LANCOM Power Cord.
- ⑥ **ATTENTION:** High touch current possible! Connect to earth before connecting the power supply.

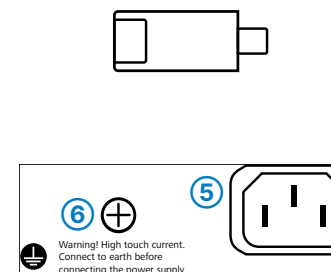

**Before initial startup, please make sure to take notice of the information regarding the intended use in the enclosed installation guide!**

**Operate the device only with a professionally installed power supply at a nearby power socket that is freely accessible at all times.**

**The power plug of the device must be freely accessible.**


**Please note that support for third-party accessories (SFP and DAC) is not provided.**



**Please observe the following when setting up the device**

- For devices to be operated on the desktop, please attach the adhesive rubber footpads
- Do not rest any objects on top of the device
- Keep all ventilation slots on the side of the device clear of obstruction
- Mount the device into a 19" unit in a server cabinet using the provided screws and mounting brackets.

Mounting & connecting

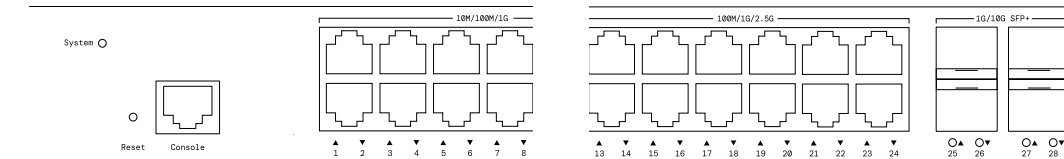

- ① ②
- ③
- ④
- ⑤

### ① System

|               |                     |
|---------------|---------------------|
| System: off   | Device switched off |
| System: green | Device operational  |
| System: red   | Hardware error      |

### ② Reset button

|                                  |  |
|----------------------------------|--|
| ~5 sec. pressed                  | Device restart                         |
| Pressed until all port LEDs glow | Configuration reset and device restart |

### ③ TP Ethernet ports 10M / 100M / 1G

|                  |                                 |
|------------------|---------------------------------|
| Off              | Port inactive or disabled       |
| Green            | Link 1000 Mbps                  |
| Green, blinking  | Data transfer, link 1000 Mbps   |
| Orange           | Link < 1000 Mbps                |
| Orange, blinking | Data transfer, link < 1000 Mbps |

### ④ TP Ethernet ports 100M / 1G / 2.5G

|                  |                                      |
|------------------|--------------------------------------|
| Off              | Port inactive or disabled            |
| Green            | Link 2500 - 1000 Mbps                |
| Green, blinking  | Data transfer, link 2500 - 1000 Mbps |
| Orange           | Link < 1000 Mbps                     |
| Orange, blinking | Data transfer, link < 1000 Mbps      |

### ⑤ SFP+ ports 1G / 10G

|       |                |
|-------|----------------|
| Off   | Port inactive  |
| Blue  | Link 10 Gbps   |
| Green | Link 1000 Mbps |

| Hardware          |   |
|-------------------|---|
| Power supply      | Internal power supply unit  |
| Environment       | Temperature range 0-40°C; short-term temperature range 0-50°C; humidity 10-90%, non-condensing                                    |
| Housing           | Robust metal housing, 19", 1 HU (442 x 44 x 375 mm > W x H x D) with removable mounting brackets, network connectors on the front |
| Number of fans    | 1   |
| Interfaces        |   |
| ETH               | 12 TP Ethernet ports 10 / 100 / 1000 Mbps<br>12 TP Ethernet ports 10 / 100 / 2500 Mbps  |
| SFP+              | 4 SFP+ ports 1 / 10 Gbps<br>28 concurrent ports in total  |
| Package Content   |   |
| Mounting brackets | 2 19" brackets for rackmounting   |
| Cables            | 1 IEC power cord, 1 serial configuration cable 1.5 m  |

Hereby, LANCOM Systems GmbH | Adenauerstrasse 20/B2 | D-52146 Wuersele, declares that this device is in compliance with Directives 2014/30/EU, 2014/35/EU, 2011/65/EU, and Regulation (EC) No. 1907/2006. The full text of the EU Declaration of Conformity is available at the following Internet address: [www.lancom-systems.com/doc](http://www.lancom-systems.com/doc)