
Hardware Quick Reference LANCOM GS-3652XP

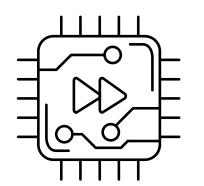

Configuration interface (Console)

or a LAN switch.

Connect the configuration interface via the included serial configuration cable to the serial interface of the device you want to use for configuring / monitoring the switch.



TP Ethernet interfaces 10M / 100M / 1G PoE+


Use Ethernet cables to connect the interfaces 1 to 36 to your PC or a LAN switch.



TP Ethernet interfaces 100M / 1G / 2.5G PoE+ Use Ethernet cables to connect the interfaces 37 to 48 to your PC







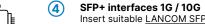


Insert suitable LANCOM SFP modules into the SFP+ interfaces 49 to 52. Choose cables which are compatible with the SFP modules and connect them as described in the module's documentation.



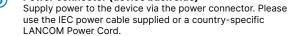

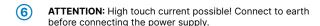

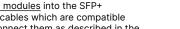







Off	Port inactive or disabled
Green	Link 1000 Mbps
Green, blinking	Data transfer, link 1000 Mbps
Orange	Link < 1000 Mbps
Orange, blinking	Data transfer, link < 1000 Mbps

TP Ethernet ports 10M / 100M / 1G PoE+

LEDs switched to Link/Act/Speed mode

Device restart

Pressed until all port Configuration reset and device restart

System / Link/Act/Speed / PoE LED

LEDs switched to PoE mode

Link/Act/Speed:

~5 sec. pressed

2) Mode/Reset button

PoE: green

Off	Port inactive or disabled		
Green	Port enabled, power supply to connected device		
Orange	Hardware error		



ce powered off	LEDs switched to Lin	k/Act/Speed mode
ce operational	Off	Port inactive or disable
ware error LEDs show link / activity / port d status LEDs show PoE status	Green	Link 2500 - 1000 Mbps
	Green, blinking	Data transfer, link 2500
	Orange	Link < 1000 Mbps
	Orange, blinking	Data transfer, link < 100

Switching the port LED display

	Off	Port inactive or disabled
	Green	Port enabled, power supply to
-		connected device
	Orange	Hardware error

Off	Port inactive or dis
Blue	Link 10 Gbps
 Blue, blinking	Data transfer, link 1
 Green	Link 1 Gbps
 Green, blinking	Data transfer, link 1

4 TP Ethernet ports 100M / 1G / 2.5G PoE+

 LEDs switched to Link/Act/Speed mode		
 Off	Port inactive or disabled	
 Green	Link 2500 - 1000 Mbps	
Green, blinking	Data transfer, link 2500 - 1000 Mbp	
 Orange	Link < 1000 Mbps	
 Orange, blinking	Data transfer, link < 1000 Mbps	

Hardware


Cables

LEDs switched to PoE mode

Off	Port inactive or disabled
Green	Port enabled, power supply to
	connected device
Orange	Hardware error

5) SFP+ ports 1G / 10G

Off	Port inactive or disa
Blue	Link 10 Gbps
 Blue, blinking	Data transfer, link 1
 Green	Link 1 Gbps
 Green, blinking	Data transfer, link 1

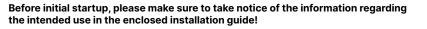

Operate the device only with a professionally installed power supply at a nearby power socket that is freely accessible at all times.

The power plug of the device must be freely accessible.

Please note that support for third-party accessories (SFP and DAC) is not provided.



Please observe the following when setting up the device

- → For devices to be operated on the desktop, please attach the adhesive rubber footpads
- → Do not rest any objects on top of the device
- → Keep all ventilation slots on the side of the device clear of obstruction
- → Mount the device into a 19" unit in a server cabinet using the provided screws and mounting brackets. If an additional rear support surface is required for more stable mounting of the switch, please use the LANCOM Switch Rack Mount L250, which is available as an accessory.

