


# LANCOM GS-2326P+ Quick Reference Guide

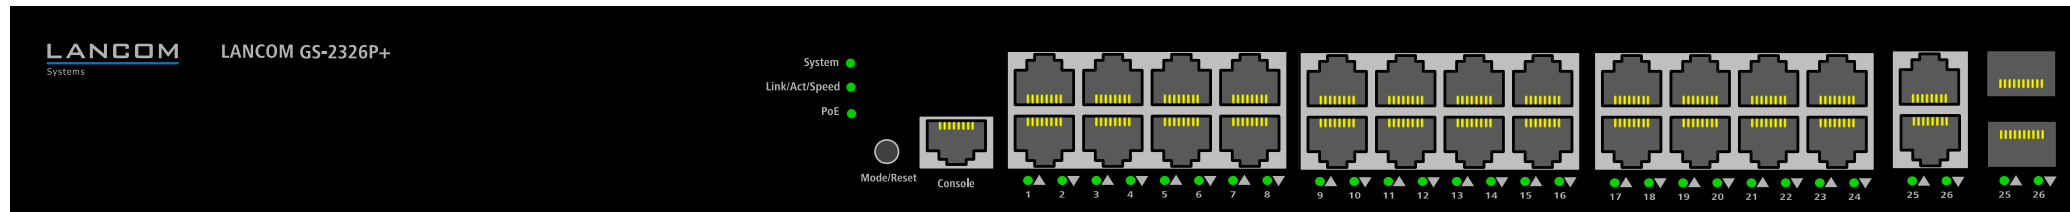

- ① **Configuration interface**  
Connect the serial interface (Console) via the included serial configuration cable to the serial interface of the device you want to use for configuring / monitoring the switch.
- ② **TP Ethernet interfaces**  
Use Ethernet cables to connect the interfaces ETH 1 to ETH 24 to your PC or a LAN switch.
- ③ **TP Ethernet interfaces (combo ports)**  
Use Ethernet cables to connect the interfaces ETH 25 and ETH 26 to your end device or another LAN switch.
- ④ **SFP interfaces (combo ports)**  
Insert suitable LANCOM SFP modules into the SFP combo ports 25 and 26. Choose cables which are compatible with the SFP modules and connect them as described in the module's documentations.
- ⑤ **Power connector (device back side)**  
Supply power to the device via the power connector. Please use the IEC power cable supplied or a country-specific LANCOM Power Cord.




**Please observe the following when setting up the device**

- > The mains plug of the device must be freely accessible.
- > For devices to be operated on the desktop, please attach the adhesive rubber footpads.
- > Do not rest any objects on top of the device and do not stack multiple devices.
- > Keep the ventilation slots on the side of the device clear of obstruction.
- > Mount the device into a 19" unit in a server cabinet using the provided screws and mounting brackets.

Before initial startup, please make sure to take notice of the information regarding the intended use in the enclosed installation guide!  
Operate the device only with a professionally installed power supply at a nearby power socket that is freely accessible at all times.

MOUNTING AND CONNECTING THE DEVICE

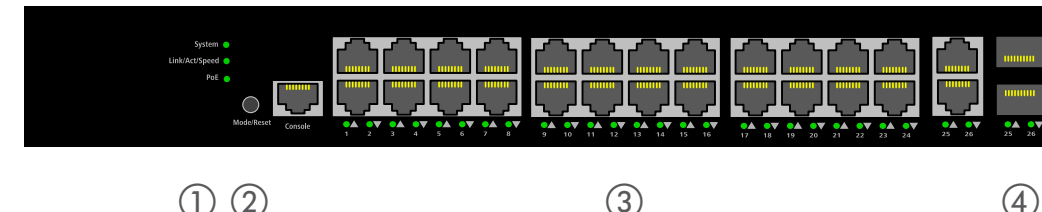

**① System / Link/Act/Speed / PoE**

System: off	Device powered off
System: green	Device operational
Link/Act/Speed: green	Port LEDs show link / activity status or port speed
PoE: green	Port LEDs show PoE status

**② Mode/Reset button**

Short press	Port LED display switch
5 seconds pressed	Restart of the device
10 seconds pressed	Reset and restart of the device

**③ TP Ethernet ports**

Off	Port inactive
Green	Link 1000 Mbps
Orange	Link ≤ 100 Mbps

**④ SFP ports**

Off	Port inactive
Green	Link 1000 Mbps
Orange	Link ≤ 100 Mbps

Hardware	
Power supply	Internal power supply unit (100–240 V, 50-60 Hz) , PoE based on IEEE 802.3af and IEEE 802.3at
Power consumption	Max. 240 W
Environment	Temperature range 0–40 °C, humidity 0–95 %; non-condensing
Housing	Robust metal housing, 1 HU with mounting brackets for 19" installation, 442 x 44 x 212 mm (W x H x D)
Number of fans	1
Interfaces	
ETH	<ul style="list-style-type: none"> <li>&gt; 24 TP Ethernet ports 10 / 100 / 1000 Mbps</li> <li>&gt; 2 Combo ports (TP/SFP) 100 / 1000 Mbps (SFP) and 10 / 100 / 1000 Mbps (TP)</li> <li>&gt; 26 concurrent ports in total</li> </ul>
Console	Serial configuration interface / COM port: 115,200 baud
Declaration of Conformity	
Hereby, LANCOM Systems GmbH   Adenauerstrasse 20/B2   D-52146 Wuerseles, declares that this device is in compliance with Directives 2014/30/EU, 2014/35/EU, 2011/65/EU, and Regulation (EC) No. 1907/2006. The full text of the EU Declaration of Conformity is available at the following Internet address: <a href="http://www.lancom-systems.com/doc">www.lancom-systems.com/doc</a>	
Package content	
Documentation	Quick Reference Guide (DE/EN), Installation Guide (DE/EN)
Mounting brackets	Two 19" brackets for rack mounting
Cables	1 IEC power cord 230 V, 1 serial configuration cable 1.5 m