



Hardware Quick Reference LANCOM GS-4554X

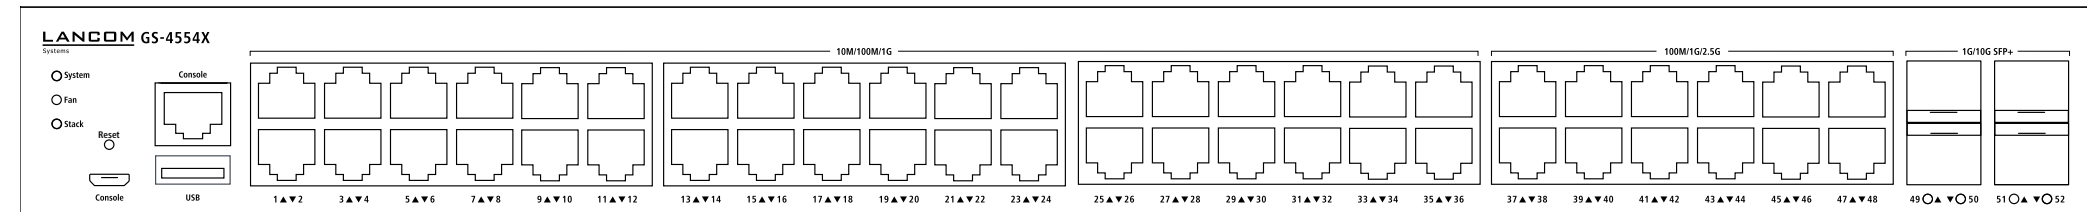


1 Configuration interfaces RJ-45 & micro USB (Console)
Connect the configuration interface via the included micro USB cable to the USB interface of the device you want to use for configuring / monitoring the switch. Alternatively, use the RJ-45 interface with the provided serial configuration cable.



 2 USB interface
Connect a USB stick to the USB interface to store general configuration scripts or debug data. You can also use this interface to upload a new firmware.



 
3 TP Ethernet interfaces 10M / 100M / 1G
Connect the interfaces 1 to 36 via Ethernet cable to your PC or a LAN switch.



4 TP Ethernet interfaces 100M / 1G / 2.5G
Connect the interfaces 37 to 48 via Ethernet cable with at least CAT5e / S/FTP standard to your PC or a LAN switch.



 5 SFP+ interfaces 1G / 10G
Insert suitable LANCOM SFP modules into the SFP+ interfaces 49 to 52. Choose cables which are compatible with the SFP modules and connect them as described in the SFP modules mounting instructions: www.lancom-systems.com/SFP-module-MI.




6 OOB interface (rear panel)
Use an Ethernet cable to connect this out-of-band service port for an IP interface independent of the switching plane for management tasks or connection to a monitoring server.

7 QSFP+ interfaces 40G (rear panel)
Plug suitable LANCOM QSFP+ modules into the QSFP+ interfaces 53 and 54. Select cables suitable for the QSFP+ modules and connect them as described in the SFP modules mounting instructions: www.lancom-systems.com/SFP-module-MI.

8 Power supply module with mains connection socket (rear panel).
Supply the device with power via the power supply socket of the power supply module. Use the supplied power cord or a country-specific LANCOM power cord.

To remove the power supply module, disconnect the module from the power supply and then pull the plug out of the module. While pressing the release lever 10 to the left, you can pull the module out of the device by the handle 11.

9 Additional slot for power supply module with mains connection socket (rear panel).
To install an additional power supply module, remove the corresponding module bay cover by loosening both associated screws and push the power supply module in as far as it will go until the release lever 10 audibly engages. Check by pulling the handle 11 that the module cannot be removed from the bay without the release lever 11 being pressed to the left.

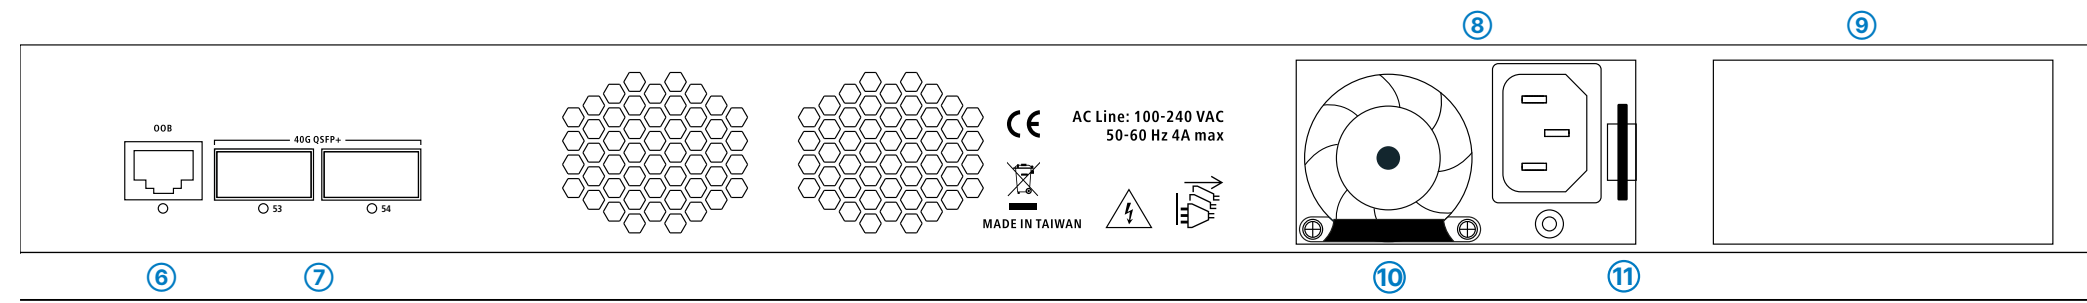


Before initial startup, please make sure to take notice of the information regarding the intended use in the enclosed installation guide!

Operate the device only with a professionally installed power supply at a nearby power socket that is freely accessible at all times.



Please observe the following when setting up the device
 → The mains plug of the device must be freely accessible.
 → For devices to be operated on the desktop, please attach the adhesive rubber footpads.
 → Do not rest any objects on top of the device and do not stack multiple devices.
 → Keep all ventilation slots clear of obstruction.
 → Mount the device into a 19" unit in a server cabinet using the provided screws and mounting brackets. Both slide-in rails are attached as shown in the accompanying installation instructions www.lancom-systems.com/slide-in-MI.
 → Please note that support for third-party accessories (SFP and DAC) is not provided.

Mounting & connecting

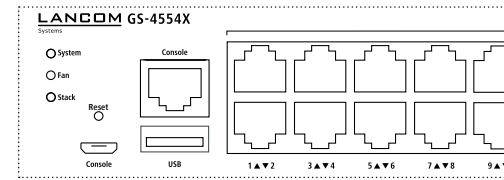

1 System / Fan / Stack


System: green	Device operational
System: red	Hardware error
Fan: red	Fan error
Stack: green	As manager: port activated and connected with standby manager connected
Stack: orange	As standby manager: port activated and connected to connected manager

2 Mode / Reset button

Short press	Switching the port LED display
~5 sec. pressed	Device restart
Pressed until all port LEDs glow permanently	Configuration reset and device restart

3 TP Ethernet ports 10M / 100M / 1G

Off	Port inactive or disabled
Green	Link 1000 Mbps
Green, blinking	Data transfer, link 1000 Mbps
Orange	Link < 1000 Mbps
Orange, blinking	Data transfer, link < 1000 Mbps

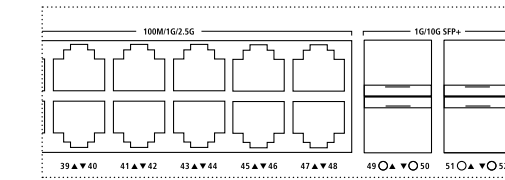

4 TP Ethernet ports 100M / 1G / 2.5G

Off	Port inactive or disabled
Green	Link 2500 - 1000 Mbps
Green, blinking	Data transfer, link 2500 - 1000 Mbps
Orange	Link < 1000 Mbps
Orange, blinking	Data transfer, link < 1000 Mbps

5 SFP+ ports 1G / 10G


Off	Port inactive or disabled
Green	Link 10 Gbps
Green, blinking	Data transfer, link 10 Gbps
Orange	Link 1 Gbps
Orange, blinking	Data transfer, link 1 Gbps

6 OOB port (rear panel)

Off	OOB port inactive
Green	Link 1000 Mbps

7 QSFP+ ports 40G (rear panel)

Off	Port inactive or disabled
Green	Link 40 Gbps
Green, blinking	Data transfer, link 40 Gbps

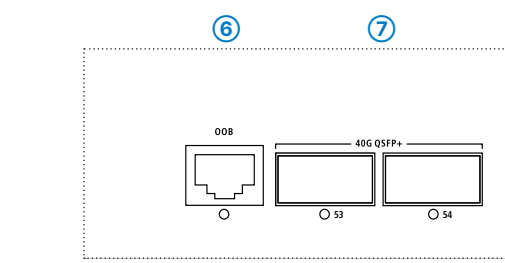

Hardware	
Power supply	Exchangeable power supply (110-230 V, 50-60 Hz)
Power consumption	Max. 82 W
Environment	Temperature range 0-40° C; short-term temperature range 0-50° C; humidity 10-90 %, non-condensing
Housing	Robust metal housing, 1 HU with removable mounting brackets and slide-in rails, network connections at front and rear, dimensions 442 x 44 x 440 mm (W x H x D)
Number of fans	2
Interfaces	
QSFP+	2 * QSFP+ 40 Gbps uplink ports for connection to superordinate core switches or content servers, can also be configured as stacking ports via software
TP Ethernet	36 TP Ethernet ports 10 / 100 / 1000 Mbps 12 TP Ethernet ports 100 / 1000 / 2500 Mbps
SFP+	4 * SFP+ 1 / 10 Gbps, uplink ports for connection to superordinate core switches or content servers, can also be configured as stacking ports via software
Console	1 * RJ-45 / 1 * Micro USB
USB	1 * USB host
OOB	1 * OOB
Package Content	
Mounting brackets	Two 19" mounting brackets, two slide-in rails for rear stabilization in 19" racks
Power supply	1x exchangeable power supply LANCOM SPSU-250, expandable to 2 LANCOM SPSU-250 power supplies (hot swappable, for redundancy operation)
Cables	1 IEC power cord, 1 serial configuration cable, 1 micro USB configuration cable

Hereby, LANCOM Systems GmbH | Adenauerstrasse 20/B2 | D-52146 Wuerselen, declares that this device is in compliance with Directives 2014/30/EU, 2014/35/EU, 2011/65/EU, and Regulation (EC) No. 1907/2006. The full text of the EU Declaration of Conformity is available at the following Internet address: www.lancom-systems.com/doc