

LANCOM GS-1326

Quick Reference Guide




Please observe the following when setting up the device

- > Mount the device into a 19" unit in a server cabinet
- > For devices to be operated on the desktop, please attach the adhesive rubber footpads
- > Do not rest any objects on top of the device



- > Ensure that the ventilation slots remain unobstructed

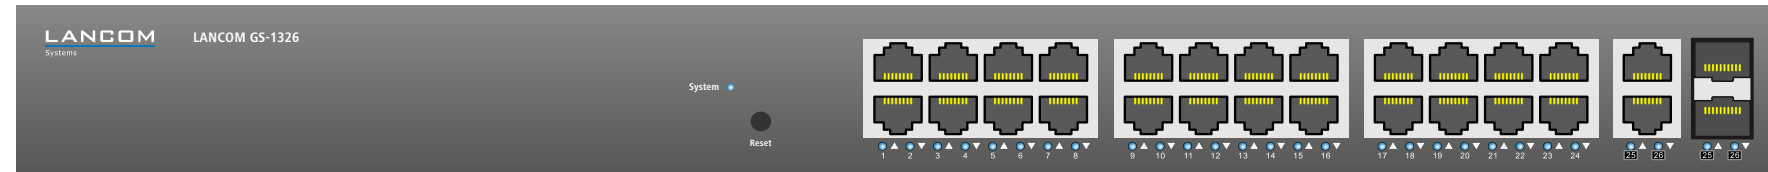

① **Power connector**
Supply power to the device via the power connector in the back. Please use the IEC power cable supplied.



② **TP Ethernet ports**
Connect one of the TP Ethernet ports 1-26 via an Ethernet cable with your end device or another LAN switch.




③ **SFP ports**
Insert a suitable SFP module (e.g. 1000Base-SX or 1000Base-LX) into the SFP port. Choose a cable compatible with the SFP module and connect it as described in the module's documentation..



! Ports 25 and 26 are combo ports. Either the TP- or the SFP port can be used.

MOUNTING AND CONNECTING THE DEVICE

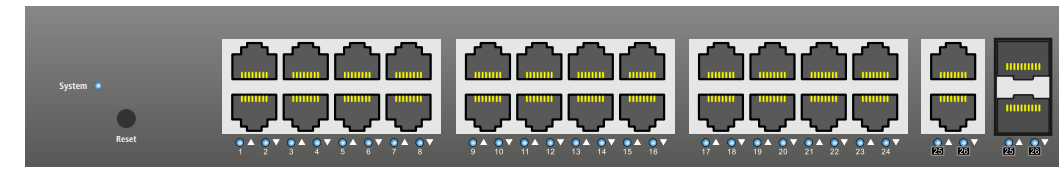

① ②

① System	
Off	Device switched off
Green	Device operational

② Reset Button	
5 seconds pressed	Restart of the device
10 seconds pressed	Reset and restart of the device

③

③ TP Ethernet Ports	
Off	Port inactive
Green	Link 1000 Mbps
Orange	Link ≤ 100 Mbps

④

④ SFP Ports	
Off	Port inactive
Green	Link 1000 Mbps
Orange	Link ≤ 100 Mbps

Hardware	
Power supply	Internal power supply unit (110–230 V, 50-60 Hz)
Power consumption	23 watts
Environment	Temperature range 0–40 °C; humidity 10–90 %; non-condensing
Housing	Robust metal housing, 19" 1U (442 x 44 x 170,3 mm > W x H x D) with removable mounting brackets, network connectors on the front
Number of fans	None; fanless design without rotating parts, high MTBF
Interfaces	
ETH	> 24 TP Ethernet ports 10 / 100 / 1000 Mbps > 2 combo ports (TP/SFP) with 100 / 1000 Mbps (SFP) and 10 / 100 / 1000 Mbps (TP) > 26 concurrent Ethernet ports in total
Declaration of Conformity	
Hereby, LANCOM Systems declares that this device is in compliance with Directives 2014/30/EU and 2014/35/EU. The full text of the EU declaration of conformity is available at the following internet address: www.lancom-systems.com/ce/	
Package Content	
Documentation	Quick Reference Guide (DE/EN), Installation Guide (DE/EN)
Mounting brackets	Two 19" brackets for rackmounting
Cable	IEC power cord